

# T/RH Mini sensor

Provides accurate measurements of temperature and relative humidity while maintaining a compact size. It is ideal for office spaces, living areas, or other environments where high protection against water and dust intrusion is not necessary. This device, belonging to the PRO sensor series, includes Aranet Sub-GHz ISM band radio which wirelessly transmits sensor measurements to the Aranet PRO base station.



## Product numbers

| Product number | Radio band | To be used in                                                           |
|----------------|------------|-------------------------------------------------------------------------|
| TDSPT101       | EU868      | European Union                                                          |
| TDSPT1U1       | US920      | United States of America, Canada, South America, Australia, New Zealand |
| TDSPT1U1       | AS923      | BRN, KHM, HKG, IDN, LAO, TWN, THA, VNM, MYS, SGP                        |
| Not available  | JP923      | Japan                                                                   |
| Not available  | KR923      | South Korea                                                             |

## Sensor performance

### General notes

- Sensors perform within the specified accuracy limits at the time of purchase, assuming they are in an equilibrium state. For evaluation of the total measurement error, long-term drift has to be taken into account.
- Measurement time constant  $\tau$  refers to the time it takes for the sensor reading to reach 63 % of a new steady-state value in response to a step change in the environment. It essentially represents the speed at which the sensor adjusts to changes in the measured quantity.
- Temperature measurement time constant  $\tau$  determined at 1 m/s air flow.

### Temperature

|                      |              |              |
|----------------------|--------------|--------------|
| Range                | -40–60 °C    | -40–140 °F   |
| Resolution           | 0.1 °C       | 0.1 °F       |
| Accuracy             | ±0.3 °C      | ±0.5 °F      |
| Long-term drift      | 0.03 °C/year | 0.05 °F/year |
| Time constant $\tau$ | 6 min        |              |

## Relative Humidity

|                      |            |
|----------------------|------------|
| Range                | 0–100 %    |
| Resolution           | 1 %        |
| Accuracy             | ±2 %       |
| Long-term drift      | 0.5 %/year |
| Time constant $\tau$ | 1 min      |

- Provided accuracy is relevant for the relative humidity measurement range 0–80 % at 23 °C (73 °F).
- Long-term drift value is provided at laboratory conditions: 23 °C (73 °F) and 30–70 % relative humidity. In significantly different conditions, higher long-term drift might occur.
- Long-term exposure to high humidity conditions (>80 %, especially condensing atmosphere) might temporarily increase the relative humidity reading above the actual value. To rectify this, it's advisable to dry the sensor in an environment with low relative humidity.

## General specifications

|                             |                                                               |                |
|-----------------------------|---------------------------------------------------------------|----------------|
| Ingress protection rating   | IP42                                                          |                |
| Operating temperature range | -40–60 °C                                                     | -40–140 °F     |
| Dimensions                  | 92×24×24 mm                                                   | 3.6×0.9×0.9 in |
| Weight (incl. battery)      | 45 g                                                          | 1.6 oz         |
| Enclosure material          | Polycarbonate                                                 |                |
| Power supply                | 1 pc AA battery                                               |                |
| Packaging includes          | 1 pc AA alkaline battery, double-sided adhesive mounting tape |                |

- To simplify the user experience when starting to use this device, it is packaged with the battery pre-installed and an insulating pull-tab between the battery and its contacts. This pull-tab should be removed when pairing the sensor with the Aranet PRO base station. For more details, please refer to the *Pairing process description* section on page 3.
- This product includes double-sided adhesive tape for quick and easy installation. However, for more secure mounting that helps prevent theft, consider using the mounting kit (product number TDAPWM02.005), which contains screws and wall anchors. This kit allows the device to be securely fastened and removed only with a tamper-resistant Torx (TT10) security screwdriver. See Section *Using the anti-theft wall mounting kit* on page 4 for instructions.

## Battery lifetime

| Measurement interval | Alkaline battery lifetime | Lithium battery lifetime |
|----------------------|---------------------------|--------------------------|
| 1 min                | 1.8 years                 | 2.4 years                |
| 2 min                | 3.2 years                 | 4.6 years                |
| 5 min                | 6.8 years                 | 10 years                 |
| 10 min               | 10 years                  | 16 years                 |

- Battery lifetime data has been obtained by mathematical extrapolation and is provided for descriptive purposes only and is not intended to make or imply any guarantee or warranty.
- Battery lifetime tests and calculations performed assuming device is at 20 °C (68 °F) and using *Fujitsu Premium LR6G07* (alkaline) and *Energizer Ultimate Lithium L91* (lithium) AA batteries as reference.
- The operating temperature range may vary based on the battery type used. Generally, the range for alkaline batteries is between -20–50 °C (-4–122 °F), whereas for lithium batteries, it is -40–60 °C (-40–140 °F).

## Aranet radio parameters

|                            |                   |        |
|----------------------------|-------------------|--------|
| Line of sight range        | 3 km              | 1.9 mi |
| Transmitter power          | 14 dBm            | 25 mW  |
| Data transmission interval | 1, 2, 5 or 10 min |        |
| Data protection            | XXTEA encryption  |        |

- Specifically for JP923 radio band, reduced transmitter power of 13 dBm (20 mW) is used.

## Aranet radio bands and channels

| Radio band | Channel 1           | Channel 2           | Channel 3           | Channel 4           |
|------------|---------------------|---------------------|---------------------|---------------------|
| EU868      | 868.1 MHz           | 868.3 MHz           | 868.5 MHz           | —                   |
| US920      | 917.3 and 922.9 MHz | 917.5 and 923.1 MHz | 917.7 and 923.3 MHz | 917.9 and 923.5 MHz |
| AS923      | 923.1 MHz           | 923.3 MHz           | —                   | —                   |
| JP923      | 923.0 MHz           | 923.4 MHz           | —                   | —                   |
| KR923      | 923.1 MHz           | 923.3 MHz           | —                   | —                   |


- This table outlines the radio channels utilized by Aranet Sub-GHz radio technology for transmitting sensor data to the base station, complying with the legislation in various regions. To determine availability of this product in your region and the corresponding channels used, refer to the *Product numbers* table at the beginning of this document.

## Pairing process description


As part of the Aranet PRO product series, this device enables wireless sensor reading transmission to the Aranet PRO and PRO Plus base station. Here's how to pair the sensor with the base station:

- **Preparing for pairing:** Place the sensor within 20 m (60 ft) of the base station during pairing. Once paired, it can communicate over a much greater distance (up to 3 km / 1.9 mi line of sight).
- **Power off the sensor:** If the sensor comes with a battery-disconnect pull tab, leave it in place for now. For battery-powered sensors that are already on, open the casing and remove the battery for at least 20 seconds. If the sensor uses a power supply, unplug it. For newer hardware versions, locate the PAIRING button on the sensor PCB which can be used to initiate pairing without the removal of battery.

- **Start the pairing process:** Access the SENSORS menu in the base station Web GUI. Set the measurement interval and select PAIR SENSOR to start the pairing process.
- **Power on the sensor:** Within 2 minutes, pull the battery tab, reinsert the battery, connect the power supply, or press the PAIRING button to initiate pairing.
- **Confirm successful pairing:** A successful pairing is indicated by the sensor appearing in the Web GUI and a specific LED blink sequence on the sensor PCB (one to three short blinks followed by a longer fade-out blink of the LED):

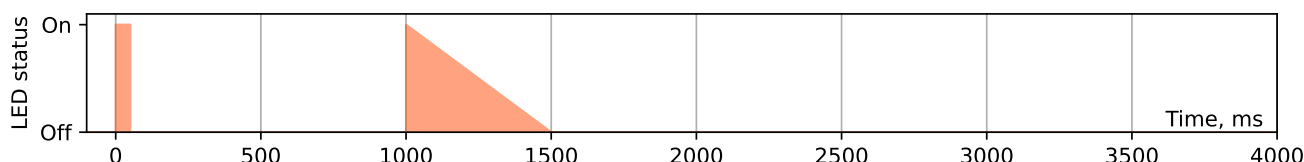


- **Troubleshooting:** If pairing fails, the sensor won't appear in the Web GUI, and the LED blink sequence will consist only of three short blinks. In this case, repeat the process closer to the base station.

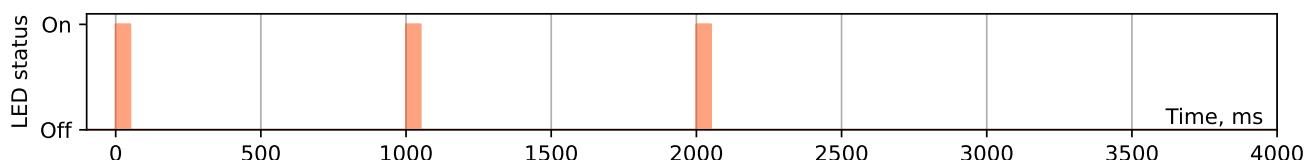

- **Final setup:** After successful pairing, customize parameters like name and tags in the Web GUI. Close the sensor casing and install it in the desired location.

## Using the anti-theft wall mounting kit

1. Use the sensor's bottom cover as a template to mark the positions on the wall for drilling.
2. Drill two holes with a 4 mm (5/32 in) diameter and a depth of 30 mm (1.2 in) at the marked points.
3. Insert the provided nylon wall anchors into the drilled holes.
4. Align the bottom cover of the sensor with the wall and fasten it using the PZ self-tapping screws, ensuring they go through the cover's openings into the anchors.
5. Before fully tightening the screws, adjust the vertical alignment of the cover by pivoting it around the top screw. The bottom opening allows for side-to-side adjustment.
6. Attach the sensor body to the securely mounted cover.
7. Finally, secure the sensor by inserting the TT10 security screw into the bottom of the sensor body.

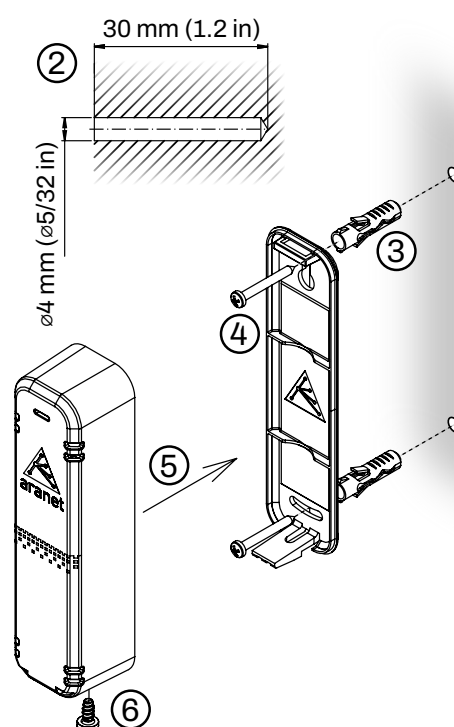

**Important:** The *T/RH Mini anti-theft wall mounting kit* is not included in the product packaging. It is sold separately with the product number TDAPWM02.005.

## Important notes

- Device is qualified to work properly within ambient clean air. Qualification for use in harsh environment is the duty of the user of the sensor. Exposure to volatile organic compounds, acids or bases, etching substances such as  $H_2O_2$ ,  $NH_3$ , shall be avoided.

## Compliance information

---



Conformité Européenne



Federal Communications Commission (USA)



Innovation, Science and Economic Development Canada

---